

# TruWood™ Premium Timber

**42"-44", TruWood Premium Timber Kit, Large**

Part Number:  
**TWL-42/44-SP**

## INSTALLATION GUIDE

TruWood Premium Timber Kit models: OR42-TRAD,  
RS-4229, LPM-4416V2.

TruWood Premium Timber Kit includes:

- 12" Base log (1).
- 16" Side logs (2).
- 8" Accent skinny logs (3).
- Bag of wood chips (1).


# Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.


The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking. We recommend placing the bark towards the flames for the best appearance and lighting contrast.

1. Ensure the ember bed media (crystals, fireglass, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select the 12" log from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.

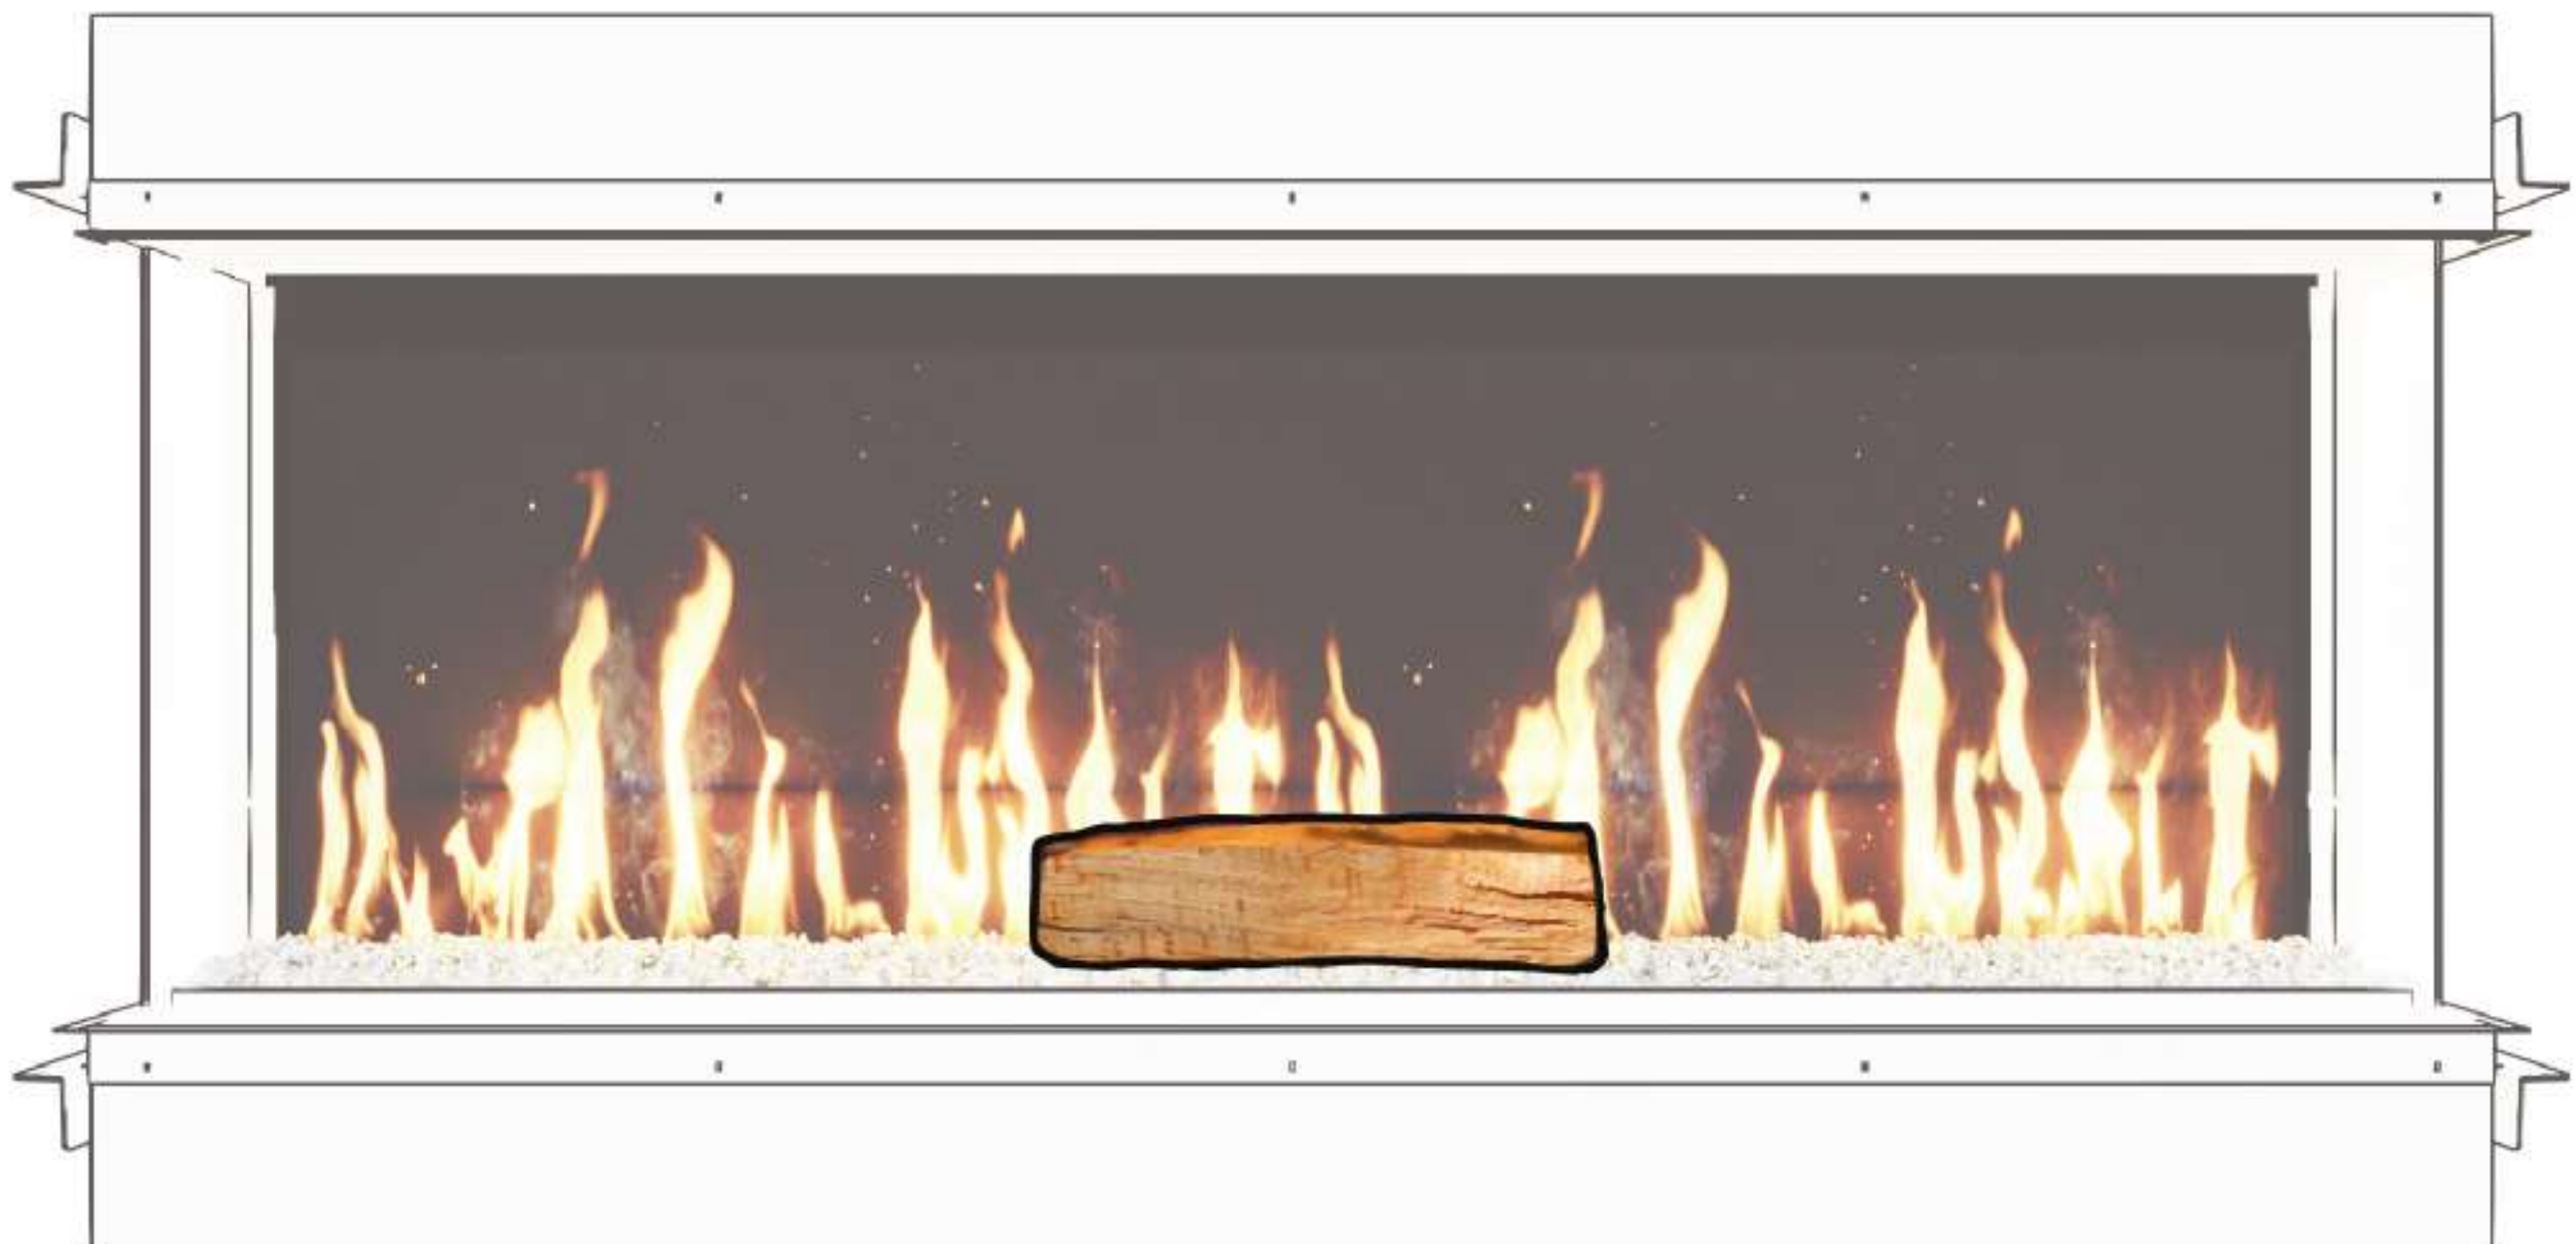


# Assembly order

2. Select the two 16" side logs and rest them on the left and right of the base log. These will create your main stack.

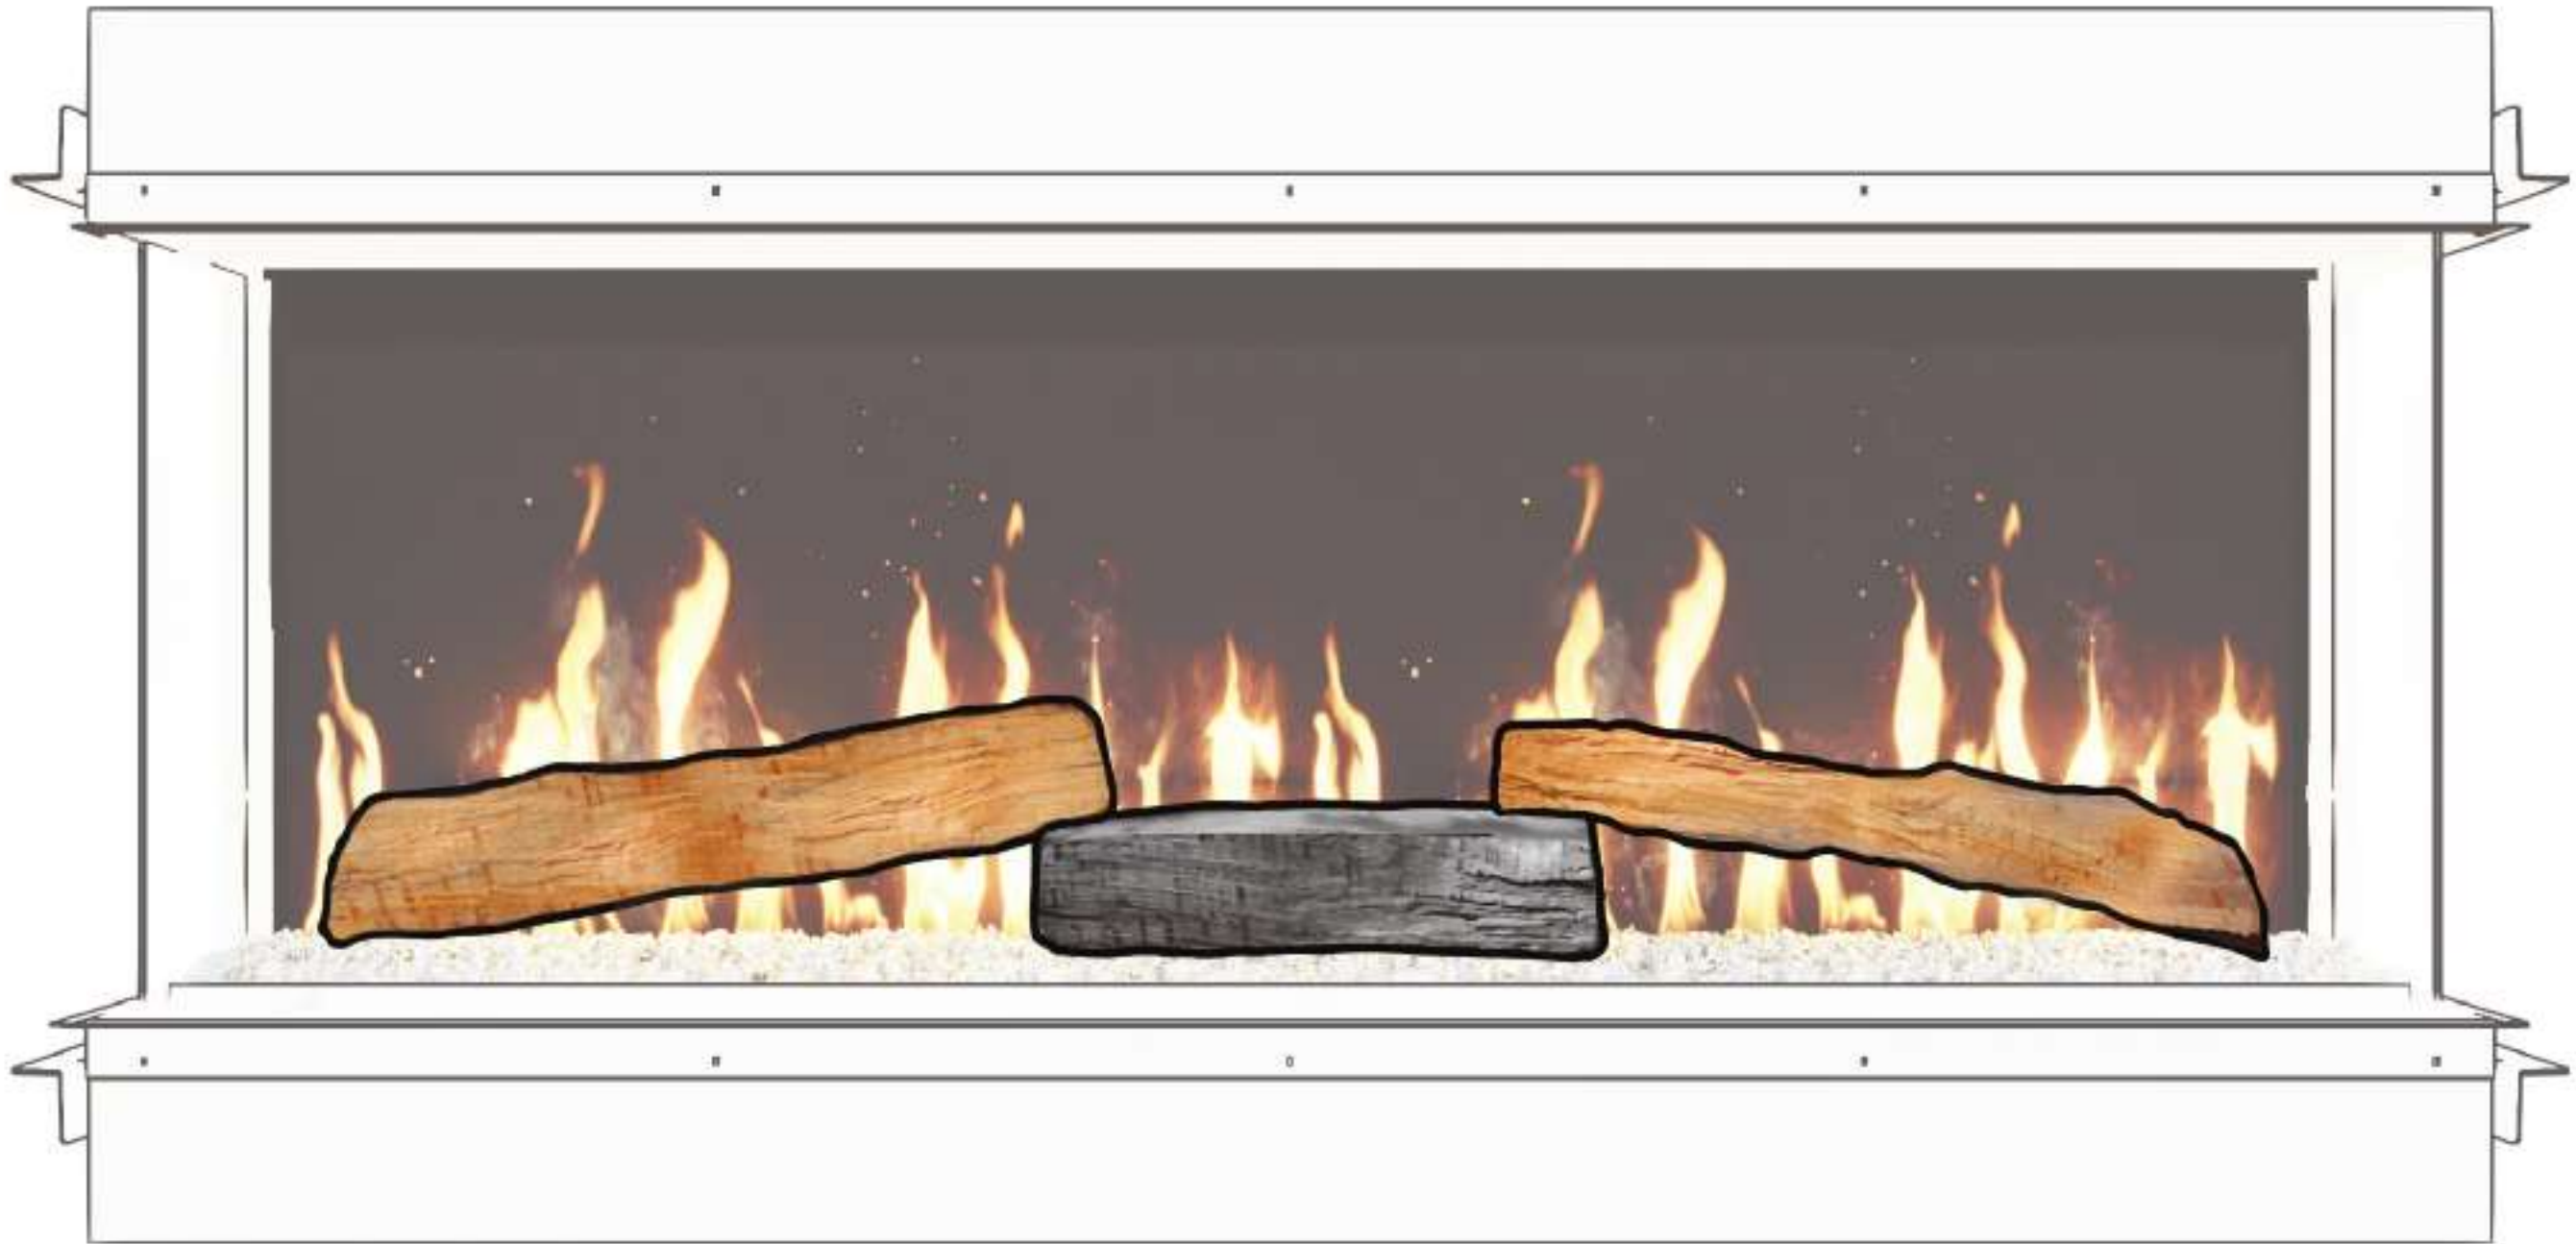


3. Select the two 8" accent logs and lay them under the 16" logs. The inside end of the log will be towards the flame screen and the outside end will be towards you.

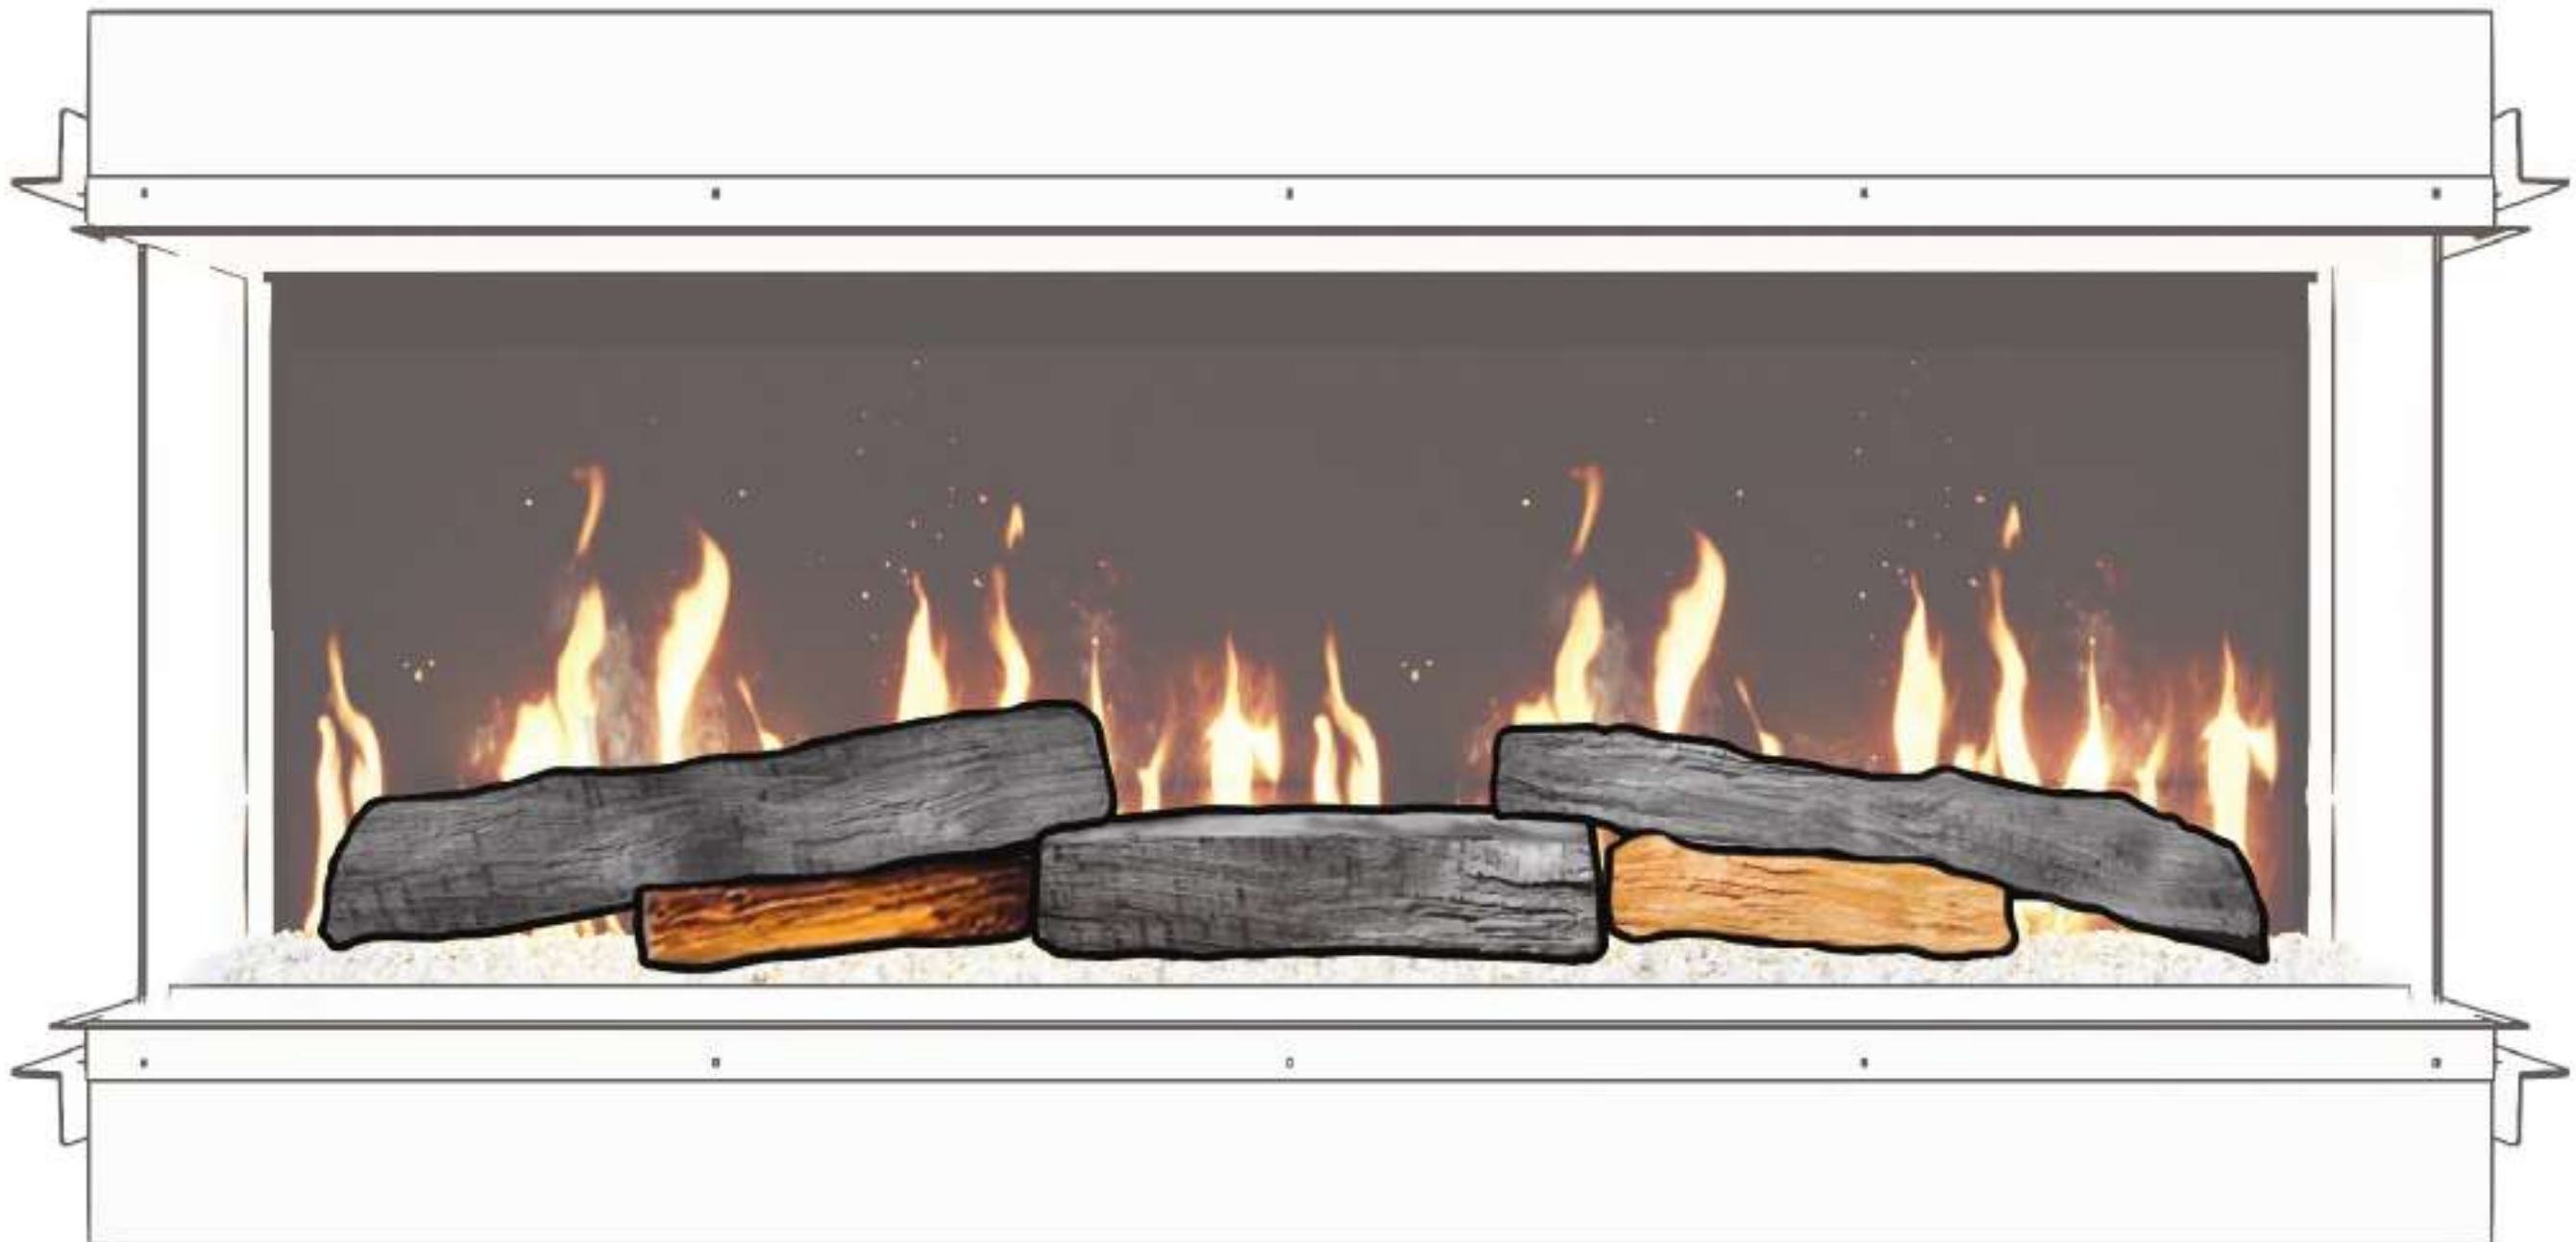

# Assembly order

4. Select the 8" center accent log and lay it across the main log diagonally.

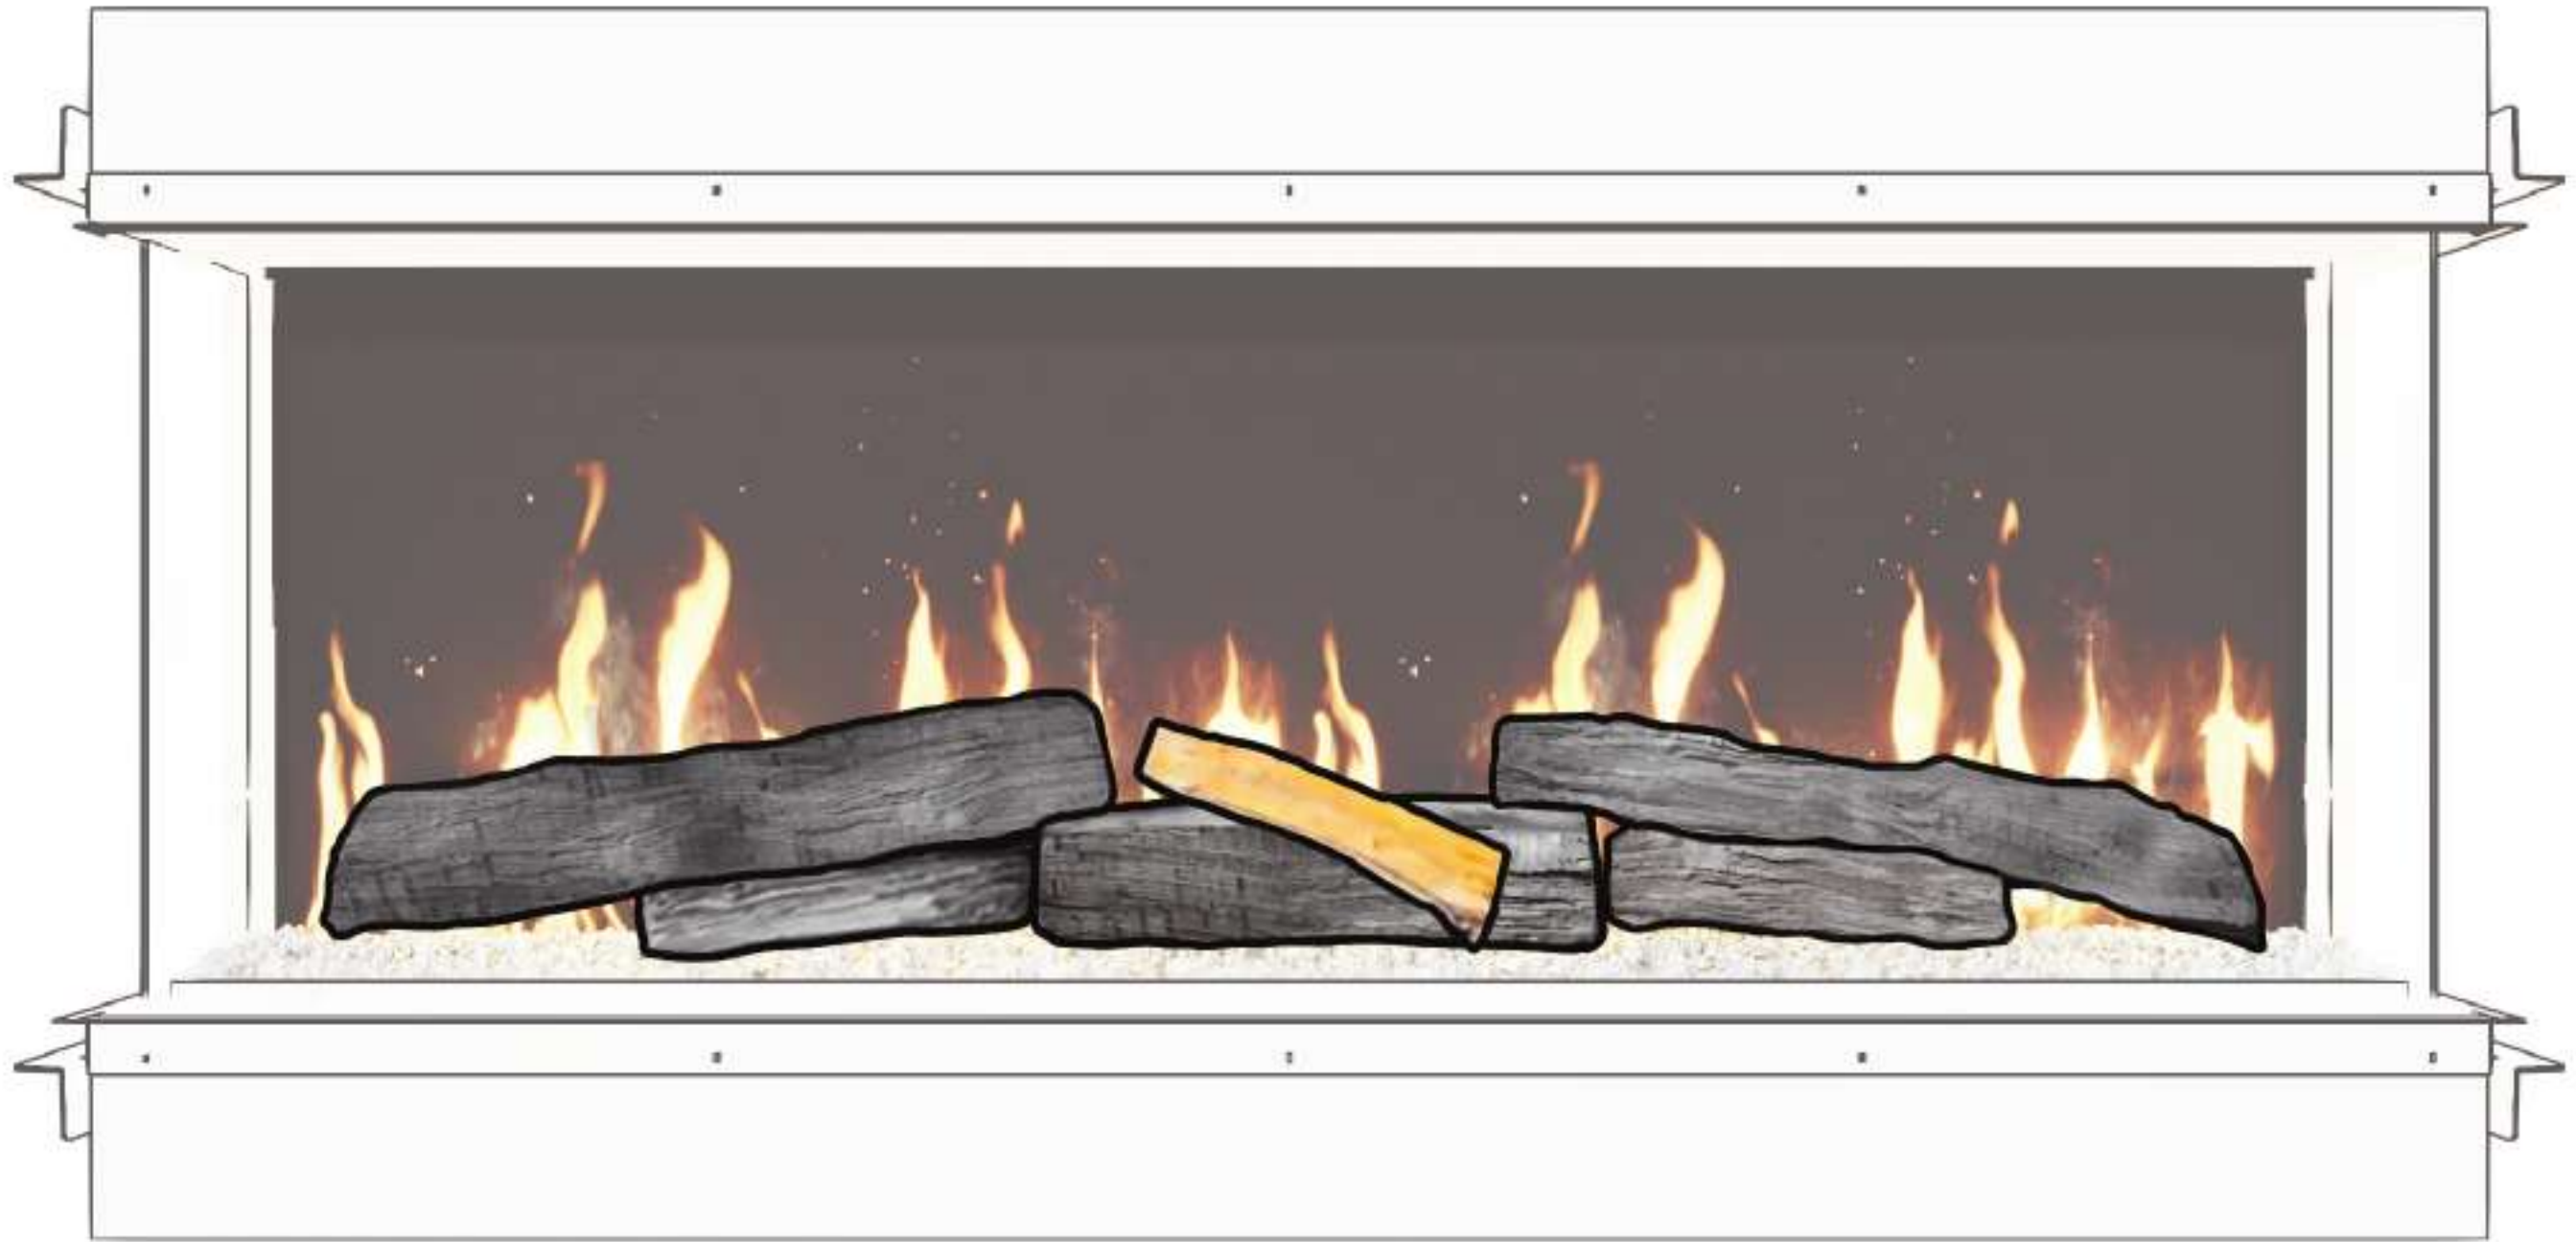

5. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



# Assembly order



42"-44", TruWood Premium Timber Kit, large installation is complete.



Condensed layout example for Redstone and Orion Traditional Units

# MODERN FLAMES®

ELECTRIC FIREPLACES

Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

Take a look at our other products from our RPG Brands family of companies



**GrandCanyonGasLogs.com**

For all your indoor, outdoor gas fireplaces & fire feature products.



**WildfireOutdoorLiving.com**

For all your outdoor living products, such as grills, refrigerators and accessories.

**RPG BRANDS**

